mpman

Portable CD Player with AM/FM Stereo Tuner

CSU38

Please read this manual before connection and use.

INSTRUCTION MANUAL

Important Safety Instructions

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN
WARNING: SHOCK HAZARD-DO NOT OPEN
AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

(1) Read these instructions:All the safety and operating instructions should be read before the product is operated.
(2) Keep these instructions: The safety and operating instructions should be retained for future reference.
(3) Heed all warnings: All warnings on the product and in the operating instructions should be followed.
(4) Follow all instructions: All operating and usage instructions should be followed.
(5) Do not use this apparatus near water: (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
(6) Clean only with dry cloth.
(7) Do not block any ventilation openings.Install in accordance with the manufacturer's instructions: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
(8) Do not install near any heat sources such as radiators,heat registers,stoves,or other apparatus (including amplifiers) that produce heat.
(9) Do not defeat the safety purpose of the polarized or ngrounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided you're your safety. If the provided plug does not fit in your outlet,consult an electrician for replacement of the obsolete outlet.
(10) Protect the power cord from being walked on or pinched particularly at plugs., convenience receptacles, and the point where they exit from the apparatus.
(11) Only use attachments/accessories specified by the manufacturer.
(12) Use only with the cart,stand,tripod,bracket,or table specified by the manufacturer, or sold with the apparatus .When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
(13) Unplug this apparatus during lightning storms or when unused for long periods of time.
(14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus,the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

(15) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
(16) WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
(17) Battery shall not be exposed to excessive heat such as the sunshine, fire or the like. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
(18) WARNING: Excessive sound pressure from earphones and headphones can cause hearing loss.
(19) The marking is located on the bottom enclosure.
(21) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

Double insulation
This is class II apparatus

ATTENTION
The CD mechanism and the sensitive circuitry may cause interference to a radio tuner nearby. Do not operate this unit while operating other radio devices.

Danger — This product utilizes invisible laser radiation. Avoid direct exposure to the beam.

Caution — Use of controls, adjustments or procedures not listed in this manual may result in hazardous radiation exposure.

CONCERNING COMPACT DISC
Only compact discs identified with this mark can be played by this player.

DIGITAL AUDIO COMPACT DISC

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant with the FCC Rules, Part15. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy. And if not installed and used in accordance with the instruction may cause harmful interference to radio communication.

This sign indicates that this product may not be disposed of with your regular household waste. For the recycling and separate collection of such products is your responsibility. Please drop off the above-mentioned waste at a designated place for recycling waste electrical equipment. If you do not know where to drop off your waste equipment for recycling. Please contact your local city office or household waste collection service.

Table of Contents

	Page
IMPORTANT SAFETY INSTRUCTIONS	1
INDEX TO THE PARTS AND CONTROLS	1
POWER SUPPLY/CONNECTING TO A HEADPHONE	2
RADIO OPERATION	2
CD OPERATION/USB&STOP MODE	3
CARES OF DISC/SPECIFICATION	4
TROUBLE SHOOTING	5
WARRANTY INFORMATION	6

Index to the Parts and Controls

TOP VIEW

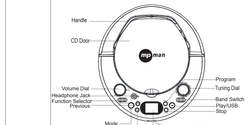

RIGHT VIEW

Power Supply

1. Using AC power
Before connecting the AC power cord, please make sure the power supply is 120V. Insert one end of the AC power cord into the AC socket on the rear of the unit and the other end into a standard wall socket.

Bottom View



2. Using batteries
Insert 6 x "C" size batteries (not included) in the battery compartment on the bottom of the unit by matching the polarities as indicated.
The unit will not operate on battery power when the AC power cord is plugged into the AC socket.
Replace batteries when the power indicator dims, the volume decreases or the sound is distorted.
Use batteries of high quality and check them regularly. Alkaline batteries are recommended.
Do not mix new batteries with old or used batteries.
Use only batteries of the same brand and type.
Batteries should not be left in the unit if they are exhausted or if the unit is not to be used for a long period of time as they may leak and damage the unit. Battery leakage is not covered under the warranty.

Connecting to a Headphone

You can use headphones with 3.5mm diameter stereo plug and an impedance of 32 Ohms. When the headphones are connected, the speakers are disconnected automatically.
Set the VOLUME to a low level before using headphones and gradually adjust the volume dial to the comfortable listening level.
Do not play the VOLUME too loud for extended periods of time to avoid any damage to your hearing.

Radio Operation

1. Slide the Function Selector (USB/CD OFF RADIO) switch to **radio.**
2. Select **AM, FM** by sliding the Band Selector switch to corresponding position.
3. Tune the desired station by turning the Tuning Control.
4. Adjust the volume with Volume dial as desired
6. Set the Function Switch to the CD OFF position to stop radio.

CD Operation

Slide the Function Selector to the USB/CD position and insert a CD disc.

PLAY/①&STOP
1. Press the PLAY/①&USB button once to start playing (Some discs will start play back automatically). The current playing track number appears on the LCD panel.
2. Press the PLAY/①&USB button twice to stop playing temporarily during playback. The current track number is flashing while pausing.
3. Press the PLAY/①&USB button again to resume normal playback.
4. Press the STOP button to stop playing.
Note: To remove disc from CD player, always press STOP and wait for complete stop.

REPEAT mode
1. Press the MODE button once to repeat playing the current track only.
2. Press the MODE button twice to repeat all tracks.(Repeat ALBUM in MP3 mode)

TRACKING mode
1. To go back to the beginning of current track, press the ⏮ button once.
2. To go back to the previous tracks, press the ⏮ button repeatedly.
3. To go to the next track, press the ⏭ button once or repeatedly to play your desired track.
4. To fast backward/fast forward through the disc, press and hold the ⏮ / ⏭ button.

RANDOM PLAY
1. Press the RANDOM button three times to start playing the disc in a random order. (Repeat ALL in MP3 mode)

PROGRAM PLAY (IN STOP MODE)
1. Press the PROGRAM button at stop mode.
2. Press the ⏭ or ⏮ button to select the desired track number, and then press PROG./RPT to confirm.
3. Repeat step 2 to set up to 18 tracks.
4. Press the PLAY/①&USB button to start playing the programmed tracks.
5. To cancel the program play, press the STOP button.
Slide the Function Selector to the USB/CD position and insert a CD disc.

INTRO PLAY
Press MODE button four times for INTRO playback, in which the tracks will be played several seconds in sequence as a introduction.
(Random playback in MP3 mode)

USB&STOP MODE
Slide the Function Selector to USB/CD position and insert a USB drive.
1. Press and hold PLAY/USB for usb playback, the audio tracks stored in USB stick will be played in sequence automatically.
2. press and hold PLAY/USB again for CD playback. The LCD will display CUP3 playback screen.
3. Press STOP to stop playback. LCD will display total number of tracks and total playback time. (In MP3 mode, LCD show total number of tracks only)

Cares of Disc

- Handle discs by their outer edges and /or the center spindle holes to prevent fingerprints and scratches.

- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.

- To remove stains or fingerprints from the surface of a disc, use a soft, lint-free, and dry cloth. Wipe in straight movements from the center of the disc to the outside. Do not use any chemical products, as they can damage the disc.

- Do not write on or attach labels to the surface of the disc.
- To minimize exposure to dust and dirt. Replace discs in their cases after use. Store each disc in its case, out of direct sunlight, high temperature and humidity.

Specification

Power Supply: 230V~50Hz
Applicable disc: CD-CD-R/ MP3 CD-RW
Power Consumption: 9 W
Output Power: 1W x2
Speaker: 8 OHM
Dimensions:
Weight:

RADIO
Frequency Range: AM: 530KHz - 1606KHz
FM: 88MHz - 108MHz

CD Player
Laser Wavelength: 760 ~ 800 nm
Tracking Method: 3-spot error detection/3.86 mm lens

Design and specifications are subject to change without notice.

Trouble shooting

Trouble shooting
Should your player develop a problem, please check below before requesting service.

Symptom	Check and Action
System does not function at all	* Check if the power cord has been properly connected to the power outlet. * Be sure to select a sound source. (CD, AM/FM etc.) * Unplug the main unit, and then reconnect it. This allows the unit to reset itself after a power surge or power interruption.
No sound	* Increase the volume. * Disconnect any headphones.
CD does not play	* No disc. Load a disc. * Disc has been loaded upside down. Place the disc with the label side up. * Disc is damaged or dirty. Clean the disc or try another one. * Moisture may be condensed inside the player. Remove the disc and leave the unit power on for one or two hours. * Disc is incorrect type for the player.
Radio does not work	* You may be in an area of weak signal coverage.

CE

This is to certify that the portable DVD palyer is conformity with council directives 2004 / 108 / EC(EMC Directive)

Applicable standards
EN55013:2001+A1+A2
EN61000-3-2:2006
EN61000-3-2:2008
EN55020:2007

For more information please visit our website
www.mpmeuroscope.com